

## Getting a Rack Config for Upgrading an IBM i5 Computer

You need to go to SST to acquire the rack config. If you lost or disabled the SST signon profile then see the document titled “Changing DST & SST Passwords” in the Technical Documents at [WWW.SCS-HOME.COM](http://WWW.SCS-HOME.COM)

Start SST with the command STRSST, the profile should be QSECOFR and you must know the password.

After signing on, take the option 1 to start a service tool.

Then, take option 7. Hardware Service Manager.

On this screen, use F6 to print a configuration.

You will be asked to Specify a 80 character or a 132 character wide report. Suggest you use 132 option which is a 1.

Also, you are asked the sort sequence and if you used 132 character wide option, then I suggest the option 1 to sort by location.

Pressing enter creates your output print report and if you plan to save it to send from the outq, you need to ensure that the printer (normally the system printer) is not ready or held until you can put a hold on the printed report. The report is named QPCSMPT .